



**Agile cloud PBX  
UID smartphone**

 
**Sipdroid  
(Android)  
Setting up Information**

1. From Agile networks homepage, Registering your agile cloud PBX, UID smartphone, please purchase a phone number (DID).



2. Available on your terminal, Android Market and the Sipdroid, Install from (<http://sipdroid.org/>) official website. (Free)

3. Sipdroid setup, Menu button on the terminal → Press **Settings** in the bottom right corner of the screen, show **SIPdroid settings**.


4. SIP Account Settings → Authorization  
Username= **UID**, Password= **Terminal password**,  
Server= **voip30XX.agile.ne.jp**  
Domain= **Default**, Username/Caller ID= **UID**,  
Port = **default**, Protocol = **default**.

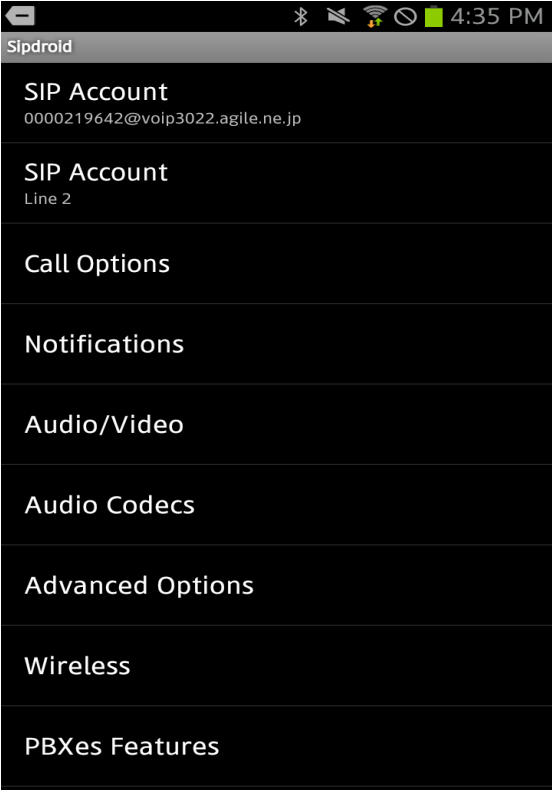


5. SIP Account Settings → Call Options  
→ Use **WLAN**, Use **3G** put a check.

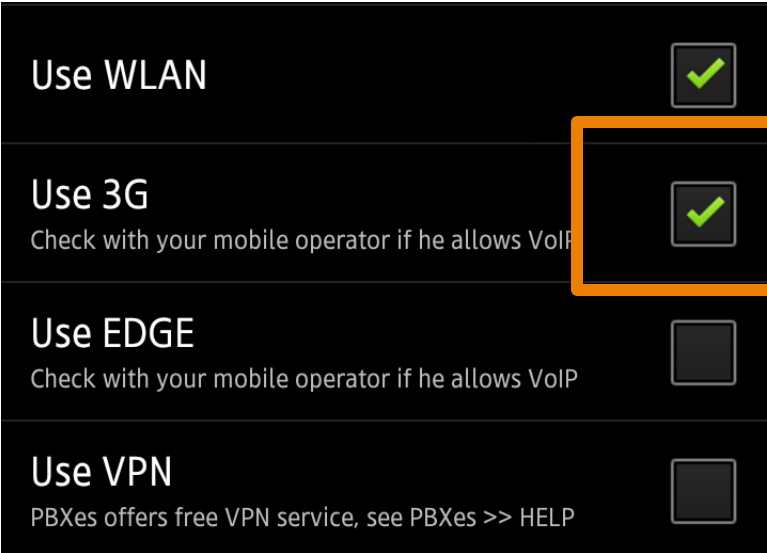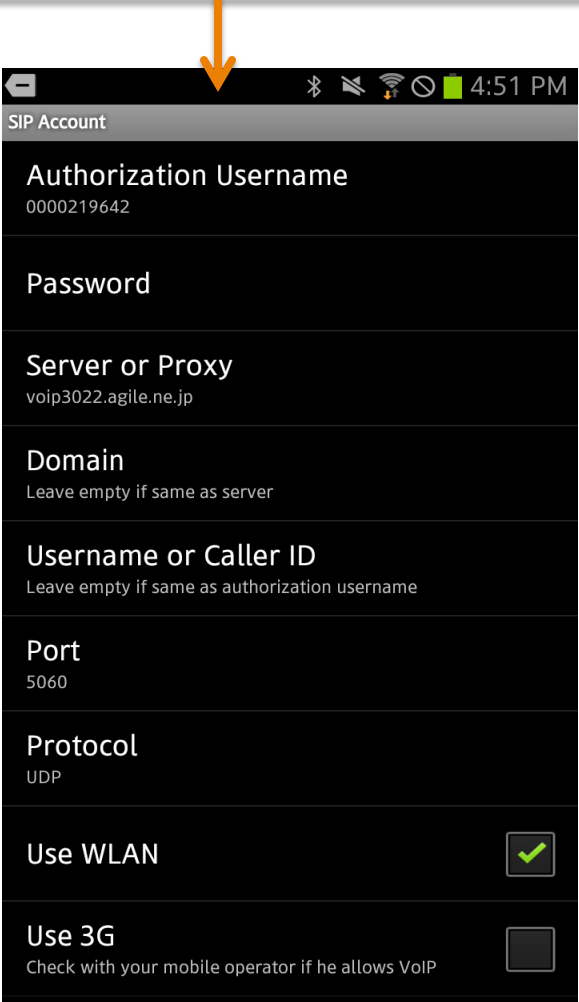

 6. SIP Account Settings → Call Options → Preferred Call Type = **Sipdroid, when available (set to)** (Sipdroid, when available set and ask sipdroid You can send via mobile phone carrier line that is Your subscription even if you do not have to resist

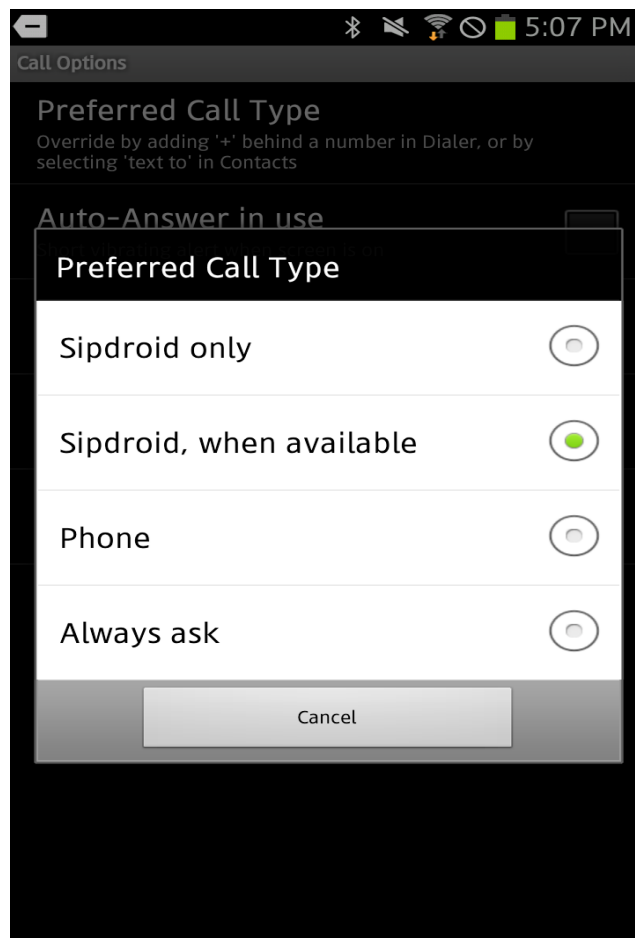

 7. Audio Codecs → **GSM = Only over WLAN** and **3 G**, PCMU = **Only over WLAN**, It is set to **Never**.

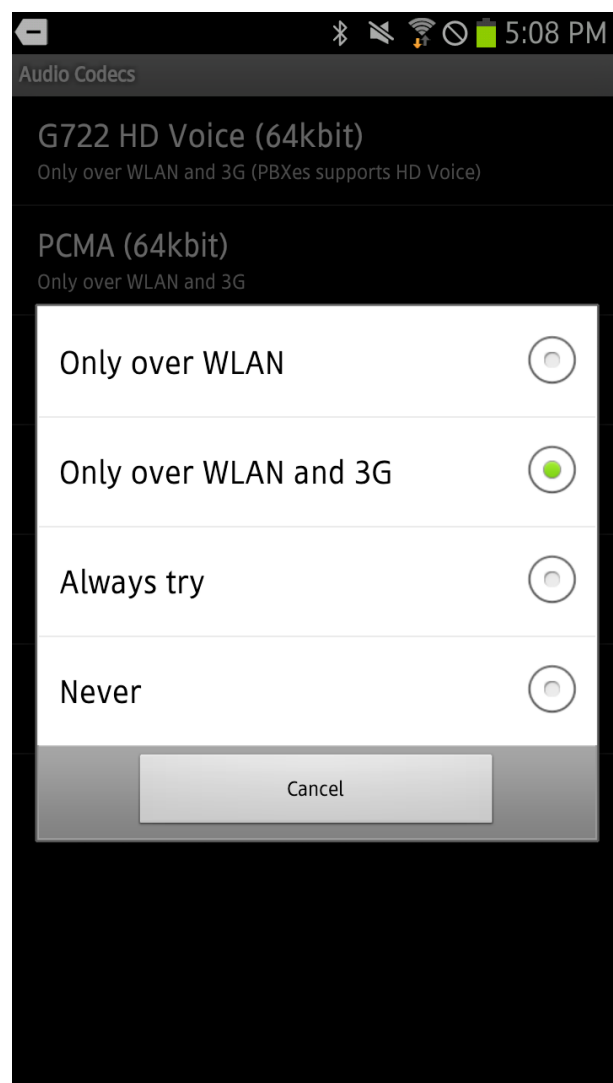

8. From Sipdroid, Outgoing or terminal and receive calls are possible from the screen. When you enter the destination phone number, such as phone book, you will be originating Agile via cloud PBX (03/06/075/078/050 etc.). If you call in (090/080), via the mobile phone carrier line that is the customer's contract, Number followed by the destination Please enter the "(press and hold 0) +".

※ If you purchased the terminal at the Agile Networks after all the setting is done we will delivery it.